

P/N 6544681 EVACINFLUX SILENT KIT

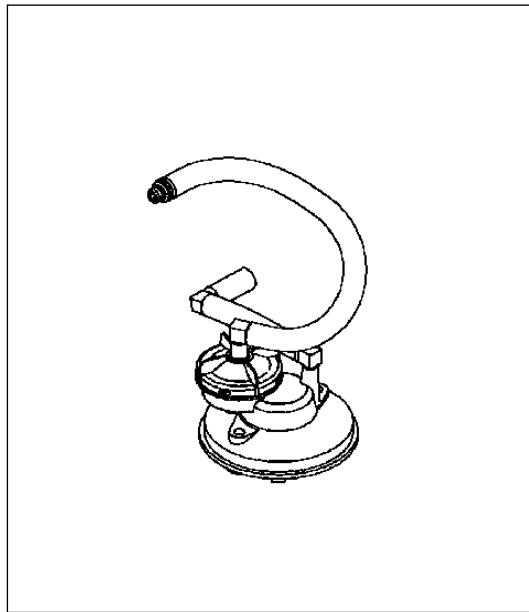


Table of contents

Installation:

P/N 6544681 EvacInflux silent kit Doc no. 002211-2

Spare parts:

P/N 6544681 EvacInflux silent kit Doc no. 002169-3

VACUUM TOILET

6544681 EVACINFLUX SILENT KIT FOR EVAC 90 AND 900 WALL AND FLOOR MODEL TOILETS

Installation for the back plate:

WALL MODEL TOILETS:

P/N	Product
5780000	Evac 90, wall model
5780006	Evac 90, wall model USPH
6540969	Evac 900, wall model
6541001	Evac 900, wall model USPH

FLOOR MODEL TOILETS:

P/N	Product
5780001	Evac 90, floor model
5780011	Evac 90, floor model USPH
6541002	Evac 900, floor model
6541003	Evac 900, floor model USPH

Installation of the EvacInflux silent kit



- Remove the discharge valve from the back plate.
- Remove the upper rubber sleeve from the discharge valve.



- Push the cover down and remove both screws.




- Lift the cover up carefully.

! NOTE: Beware the bouncing spring.


VACUUM TOILET

6544681 EVACINFLUX SILENT KIT FOR EVAC 90 AND 900 WALL AND FLOOR MODEL TOILETS

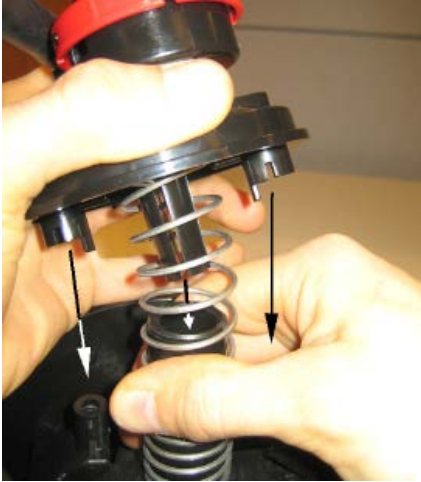

- Install the EvacInflux silent kit.
- String the guide posts of the cover trough the spring into the hole of the valve mechanism. Control the spring with the other hand to help mounting.

! NOTE: Pay attention to the right position of the cover. The red cap of the air valve must be on the same side of the discharge valve than the outlet pipe.

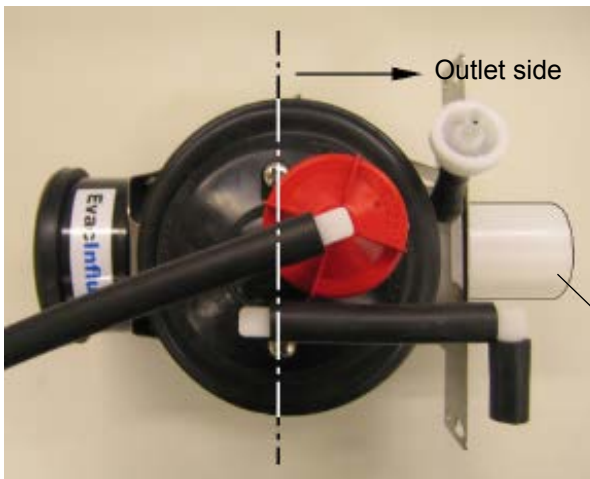

! NOTE: Pay attention to the right position of the cover. The red cap of the air valve must be on the same side of the discharge valve than the outlet pipe (outlet side).



- Put both screws back on their place and tight properly.

VACUUM TOILET

6544681 EVACINFLUX SILENT KIT

